

The Cordless REDINATOR



To turn on the unit press and hold the vibration button and the heater pad on/off button together.

The power indicator will light up Green/Orange or Red if it needs charging.

Once on press the heater pad button and the heater pad status indicator will flash blue while heating up and will stay blue once temperature has been achieved. The heater will turn off after 40 seconds.

To use the vibration function silmply press and hold the button on the blue shaft.

To power down the unit press and hold the vibration and heater pad buttons simultaneously. Always use the tool during a vacuum cycle.

The cordless REOINATOR has been designed to help you get the best results from the hardest to repair glass impacts.

The pad heats up in under 30 seconds giving a precise localized increase in glass temperature that helps the resin penetrate the crack without overheating which can cause the cracks to close. Simply place the pad over the impact site on the inside of the glass and let the gentle heat help the resin flow.

How many times have you been gently tapping the glass to get the air out of an impact and it made the cracks run? If you have stubborn bubbles that wont move use the vibrating function. Designed to vibrate at a specific frequency that reduces the risk of cracks running away the vibrations will help shift the most hard to move air pockets.